


NeatUp™ 2.0

Assembly Instructions

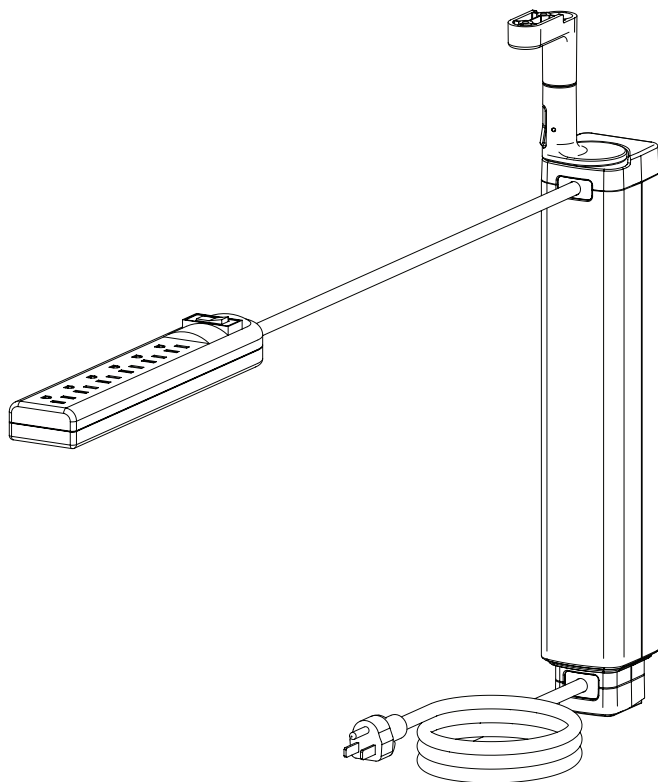

Humanscale®

North America: +1 800 400 0625



Europe: +353 (0)1 858 0910

Asia Pacific: +8522581 0570

EN 2

FR 7

Parts Included

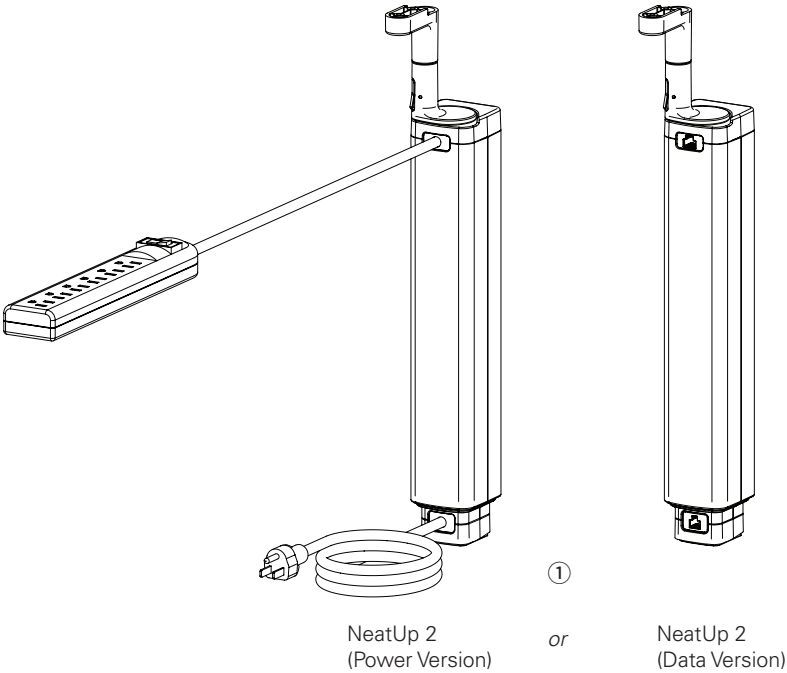


Upper Mounting
Screws



Lower Mounting
Screws

Tools Needed

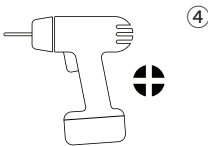

Drill with Philips
Head Driver Bit




Pencil

Assembly Instructions


Confirm Table Compatibility

Before beginning installation, confirm that your table is compatible with NeatUp 2.

NeatUp 2 has a minimum height of 18.9"/48cm and a maximum height of 51.2"/130cm. If your table exceeds either of these it must be electronically limited to prevent damage to the NeatUp 2.

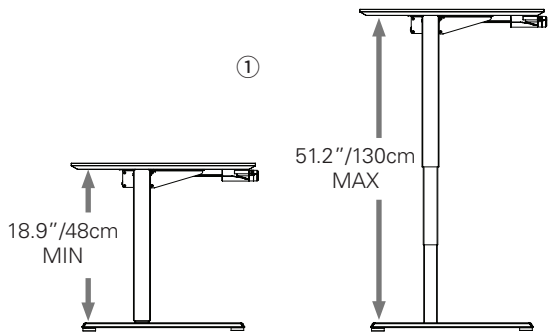


The upper mounting socket on NeatUp can be placed in 3 different positions and the mounting stem can rotate 360°. Before installing, check to make sure it can be positioned in a way that it can be screwed into the worksurface without interference from structural brackets.

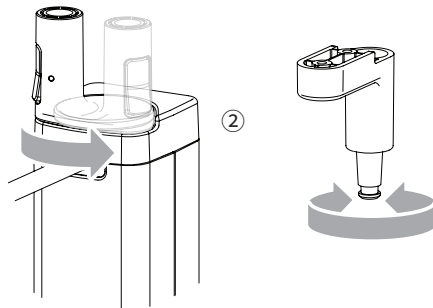


NOTE: As Neatup is raised and lowered, a light dust may appear on the sides of the column. This can be wiped away with a soft cloth and does not affect the performance of the product.

Attach Foot

- 1 If needed, raise table height so there is at least 20"/51cm between the table foot and the bottom of the worksurface
- 2 Clean the surface of the table foot with the included alcohol wipe and let dry

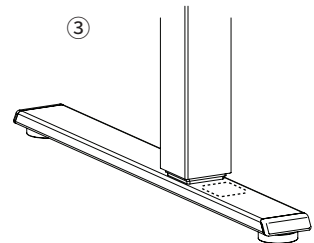


- 3 Peel away the film from the adhesive pad on the bottom of NeatUp 2.


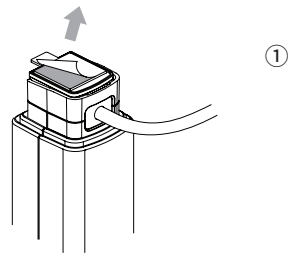


- 4 Align the NeatUp 2 with the table leg and firmly press down to bond adhesive

NOTE: Adhesive requires 24 hours to achieve full bonding strength

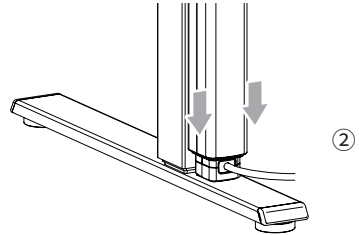


- 5 To further secure NeatUp, remove column from adhesive mounting plate by sliding away from the table leg, then screw mounting plate into table foot with provided self-drilling screws.

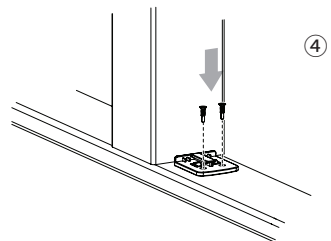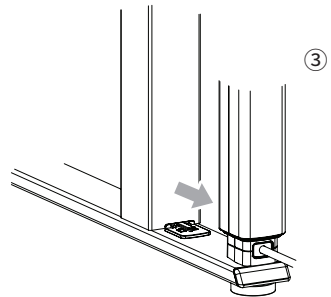



- 6 Reinstall the NeatUp onto the foot

Attach Top


- 1 Raise upper column of NeatUp 2 to the bottom of the worksurface
- 2 Position the mounting stem to avoid metal brackets. For best performance it should be as close to centered above the NeatUp column as possible.
- 3 Mark the position of the mounting stem on the worksurface.

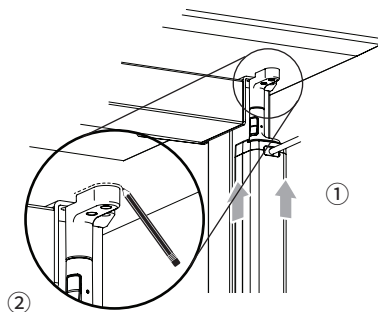

- 4 Lower the NeatUp column and remove the mounting stem by pushing the release button
- 5 Screw the mounting stem into the marked position under the worksurface

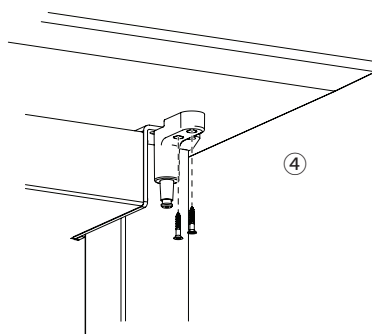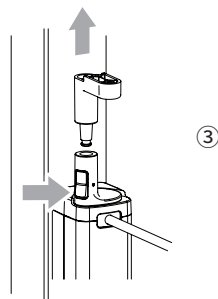


- 6 Raise the upper NeatUp column until the mounting socket engages with the mounting stem and clicks into place.

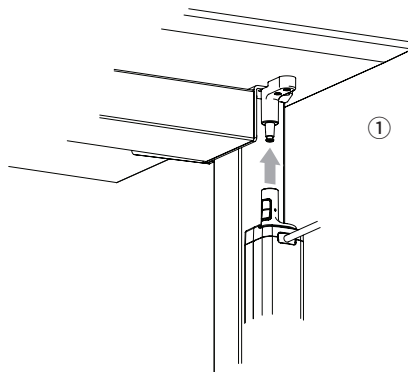


Removing NeatUp

- 1 Push the release button on the upper mounting socket to unhook NeatUp from the mounting stem.

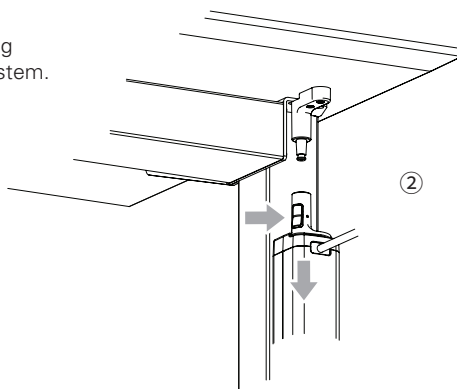

- 2 Pull the bottom of NeatUp away from the table leg to disengage the lower mounting plate

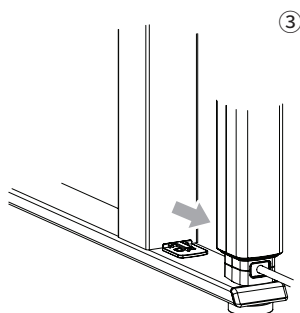

Pièces incluses

Assemblage du rail (vue arrière)

- ① NeatUp 2 (version de puissance) ou NeatUp 2 (version des données)
- ② Vis de montage supérieures
- ③ Vis de montage inférieures

Outils nécessaires

- ④ Perceuse électrique avec embout Philips
- ⑤ Crayon

Voir page 2

Instructions d'assemblage

Confirmer la comptabilité de la table

Avant de commencer l'installation, confirmez que votre table est compatible avec le NeatUp 2.

Le NeatUp 2 a une hauteur minimale de 48 cm (18,9 po) et une hauteur maximale de 130 cm (51,2 po). Si votre table dépasse l'une ou l'autre de ces valeurs, elle doit être limitée de manière électronique pour empêcher les dommages au NeatUp 2.

Voir page 3, ①

La douille de montage supérieure sur le NeatUp peut être placée en trois différentes positions, et la tige de montage peut pivoter sur 360°. Avant l'installation, vérifiez qu'elle peut être placée de manière à être vissée sur la surface de travail, sans interférence avec les supports de structure.

Voir page 3, ②

REMARQUE : Lorsque Neatup est élevé et abaissé, une légère poussière peut apparaître sur les côtés de la colonne. Cela peut être essuyé avec un chiffon doux et n'affectera pas les performances du produit.

Fixer la patte

- 1 Au besoin, augmentez la hauteur de la table pour qu'il y ait au moins 51 cm (20 po) entre le pied de table et le dessous de la surface de travail.
- 2 Nettoyez la surface du pied de table avec le tampon d'alcool inclus et laissez sécher.
- 3 Détachez la pellicule du tampon adhésif sous le NeatUp 2.

Voir page 4, ①

- 4 Alignez le NeatUp 2 avec la patte de table et appuyez fermement dessus pour coller l'adhésif.

Voir page 4, ②

REMARQUE : Il faut compter 24 heures pour que l'adhésif colle pleinement.

- 5 Pour sécuriser davantage le NeatUp, retirez la colonne de la plaque de montage adhésive en la glissant à l'écart de la patte de table, puis vissez la plaque de montage sur le pied de table avec les vis autoperçantes.
- 6 Réinstallez le NeatUp sur le pied.

Voir page 4, ③-④

Fixer le dessus

- 1 Soulevez la colonne supérieure du NeatUp 2 jusqu'au bas de la surface de travail.
- 2 Placez la tige de montage de manière à éviter les supports en métal. Pour une meilleure performance, elle devrait être aussi centrée que possible au-dessus de la colonne du NeatUp.
- 3 Marquez la position de la tige de montage sur la surface en bois.
- 4 Abaissez la colonne du NeatUp et retirez la tige de montage en poussant le bouton de libération.
- 5 Vissez la tige de montage sur la position marquée sous la surface de travail.
- 6 Soulevez la colonne supérieure du NeatUp jusqu'à ce que la douille de montage s'engage sur la tige de montage et clique en place.

Voir page 5, ①

Voir page 5, ②

Voir page 5, ③

Voir page 5, ④

Voir page 6, ①

Retirer le NeatUp

- 1 Poussez sur le bouton de libération de la douille de montage supérieure pour décrocher le NeatUp de la tige de montage.
- 2 Tirez le bas du NeatUp à l'écart de la patte de table pour désengager la plaque de montage inférieure.

Voir page 6, ②

Voir page 6, ③

Humanscale Corporation
1114 6th Ave. 15th Floor
New York, NY 10036

Humanscale International Holdings Ltd.
IDA Industrial Estate
Poppintree
Dublin, D11 XY42
Ireland

Humanscale UK Ltd.
200 St John St
London EC1V 4RN
United Kingdom

For our terms and conditions please go to
<https://www.humanscale.com/about/legal-information/terms-conditions.cfm>

© 2023 Humanscale Corporation. The text and artwork are copyrighted materials. All rights reserved. The Humanscale mark and logo are trademarks of Humanscale Corporation and are registered in the United States and certain other countries.