

flush-mount countersink guide

unifit outlet | single

Achieve a seamless, minimalist finish by flush mounting your unifit single outlet. Follow the steps below for optimal results.

step-by-step instructions

1. Drill the main hole

- Use a 1-3/8" forstner bit
- Ensure clean, accurate alignment

2. Create the countersink (optional)

- Make a circular recess:
 - 1/16" (1.5 mm) around the entire hole
 - 1/10" (2.5 mm) deep

tooling recommendations


- **Wood, veneer:**

- | | |
|--------------|------------------------------|
| Hole: | 1-3/8" forstner bit ↗ |
| Countersink: | 1/16" rabbeting router bit ↗ |

Install can be done on site. Example: [Tools Today](#)

- **Wood, veneer & hard materials (stone, tile, metal, glass):**

- | | |
|--------------|---------------------------------|
| Hole: | CNC machine / waterjet / laser. |
| Countersink: | CNC machine only |

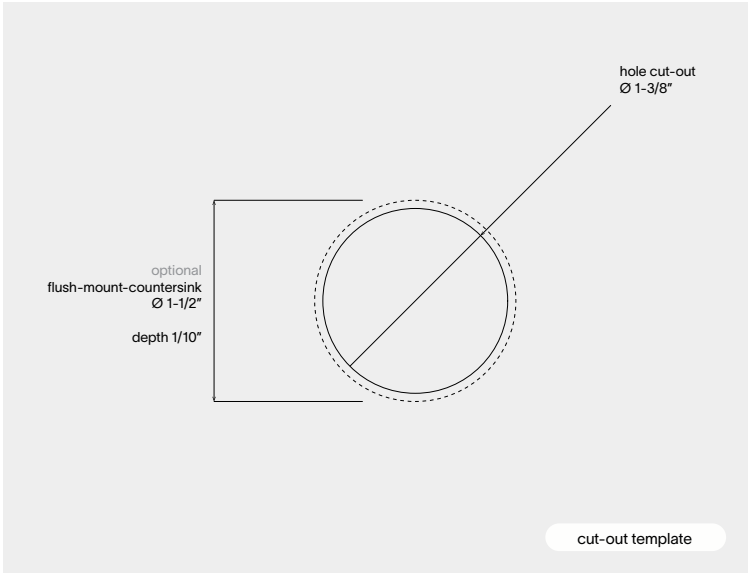

* Prado America LLC is not liable for incorrect hole drilling. Installation must be carried out by a qualified professional. We recommend testing the process on a sample material before final installation.