


back box cover plate | duplex


installation instruction

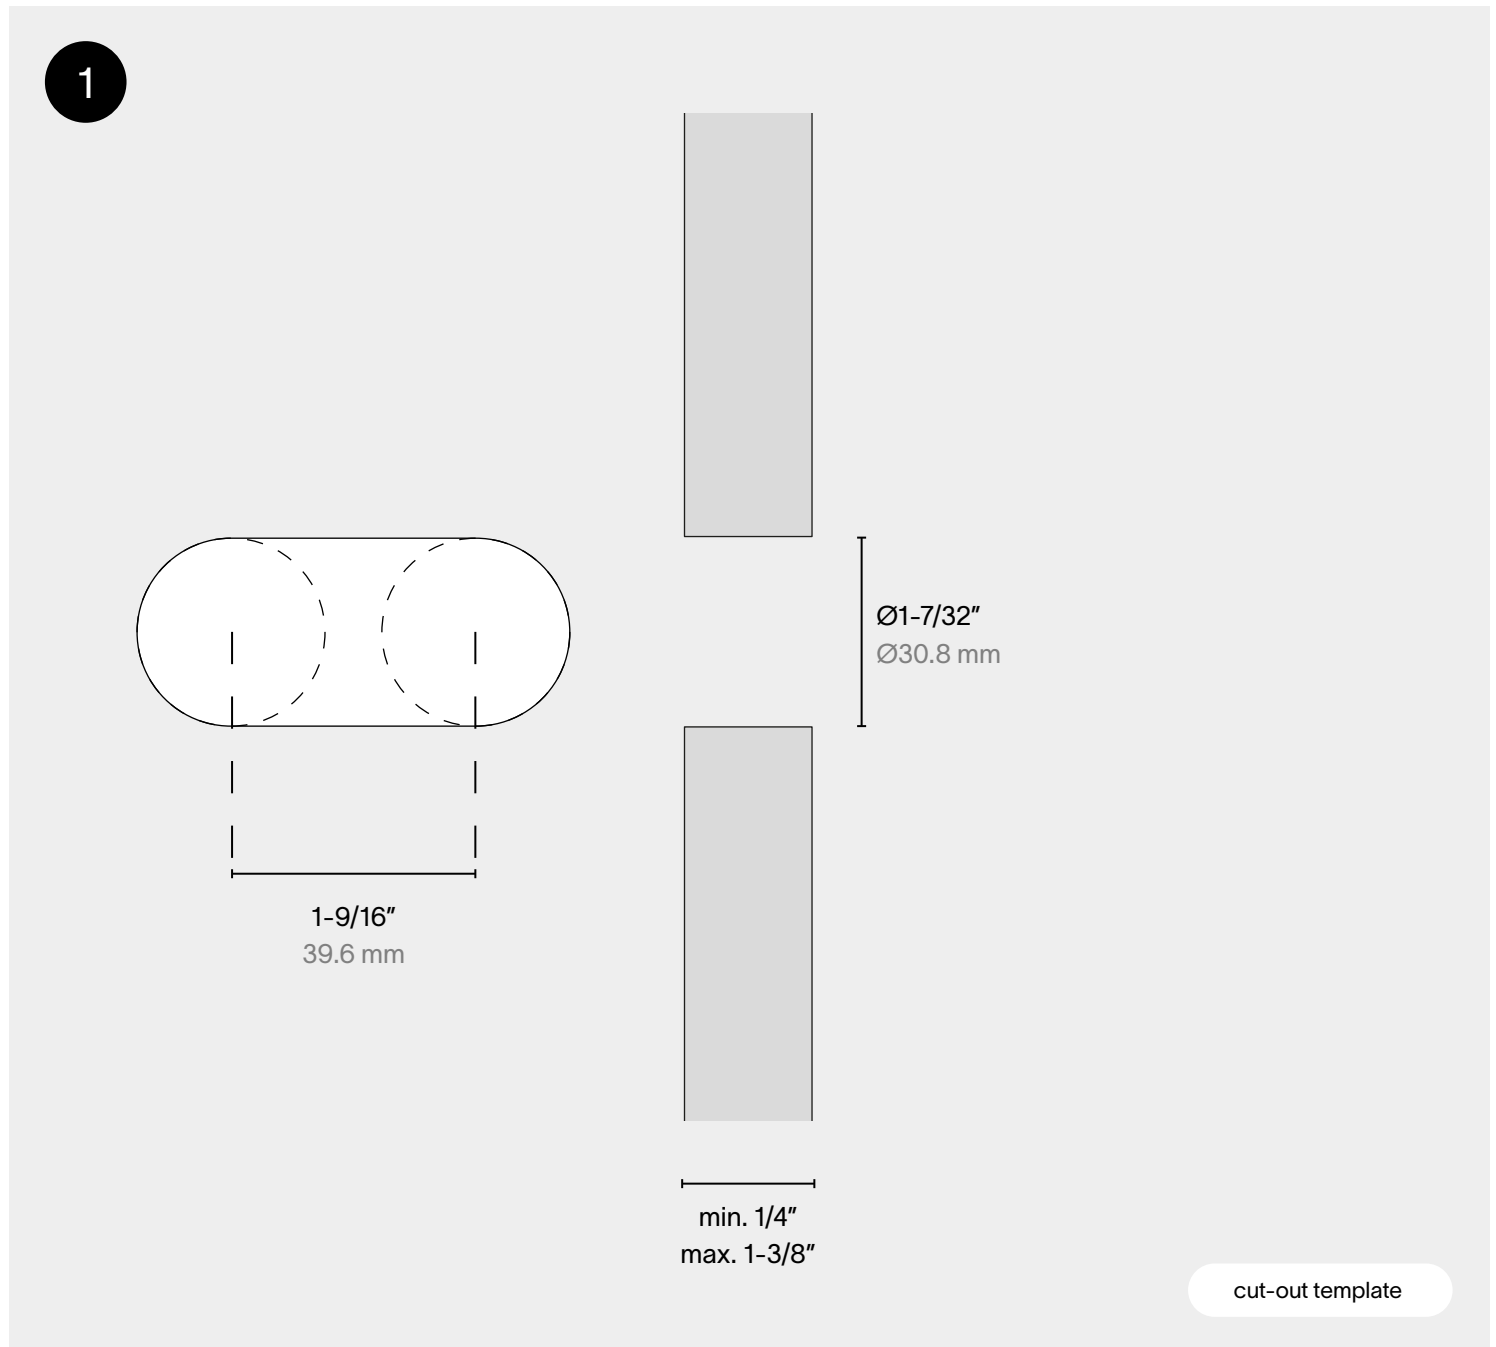

Mill the installation hole. We recommend using a CNC waterjet or laser to create the cut-out. Hand cutting may lead to undesired results.

2


optional flush mount countersink

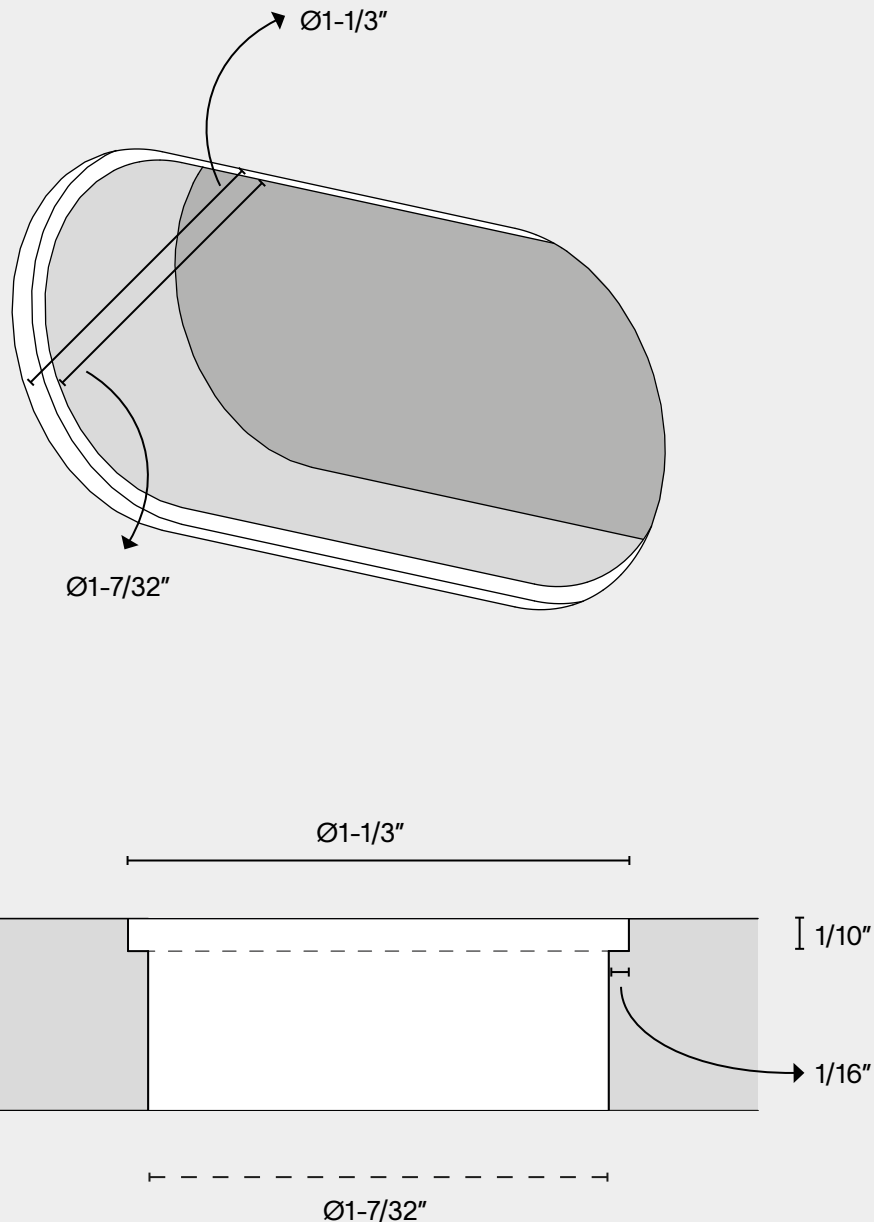


cut-out template

Flush mount countersink. Use a CNC machine to make the countersink hole. Alternatively, for wood you can use a $1/16''$ rabbeting router bit.


2

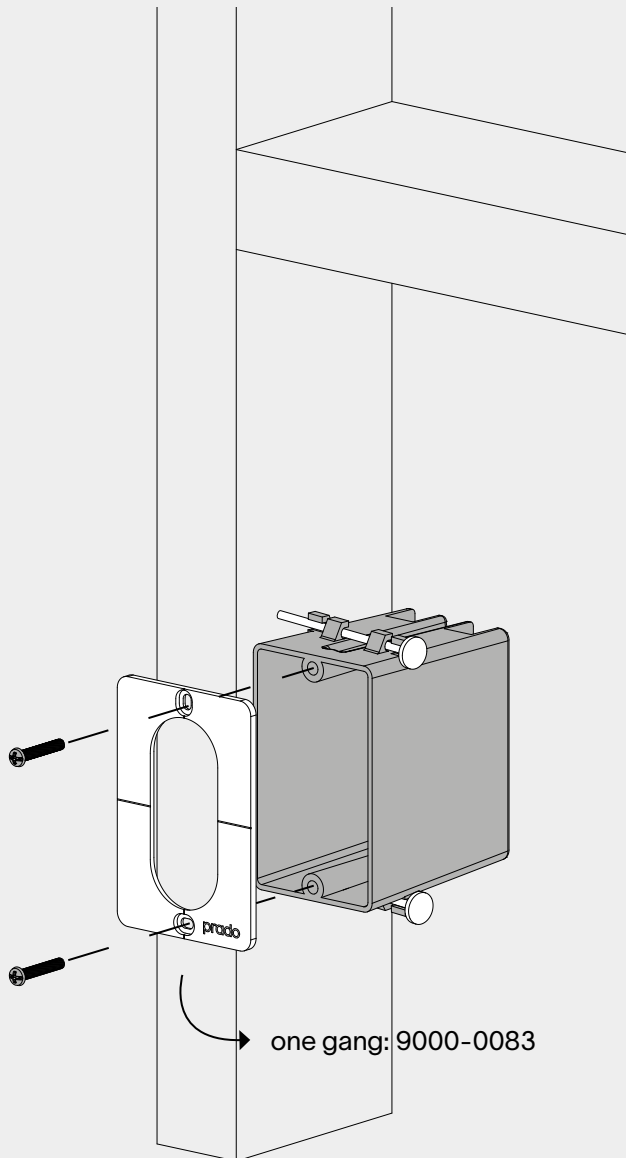

OR

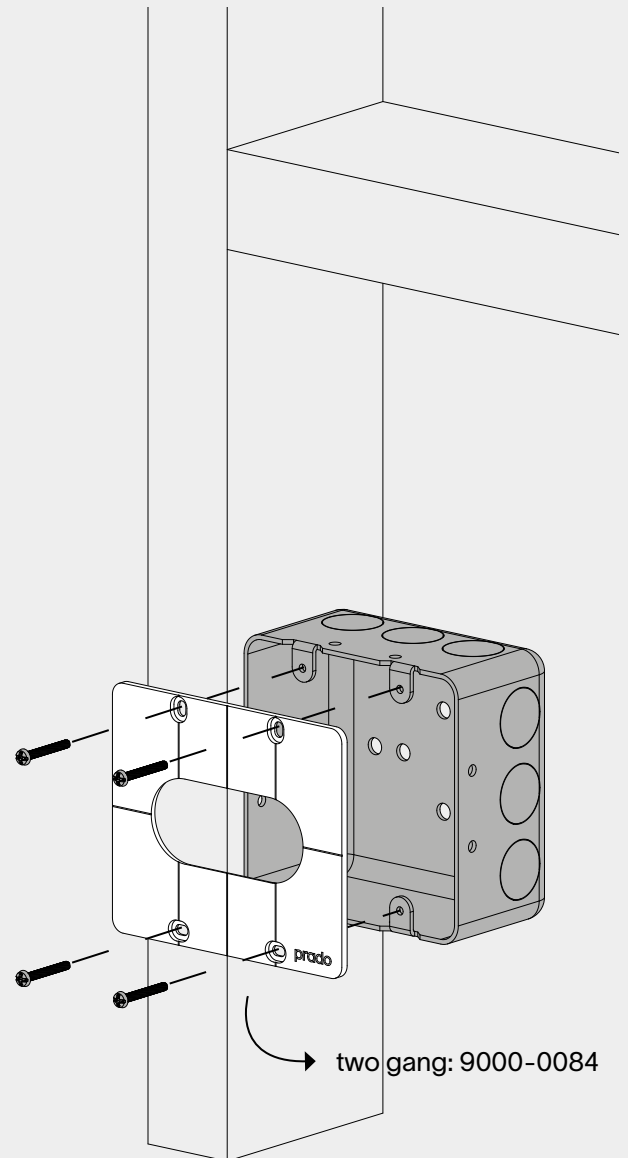

Max. dimensions back box. The back box cover plate must fully enclose the opening of the back box, with no gaps or exposed openings.

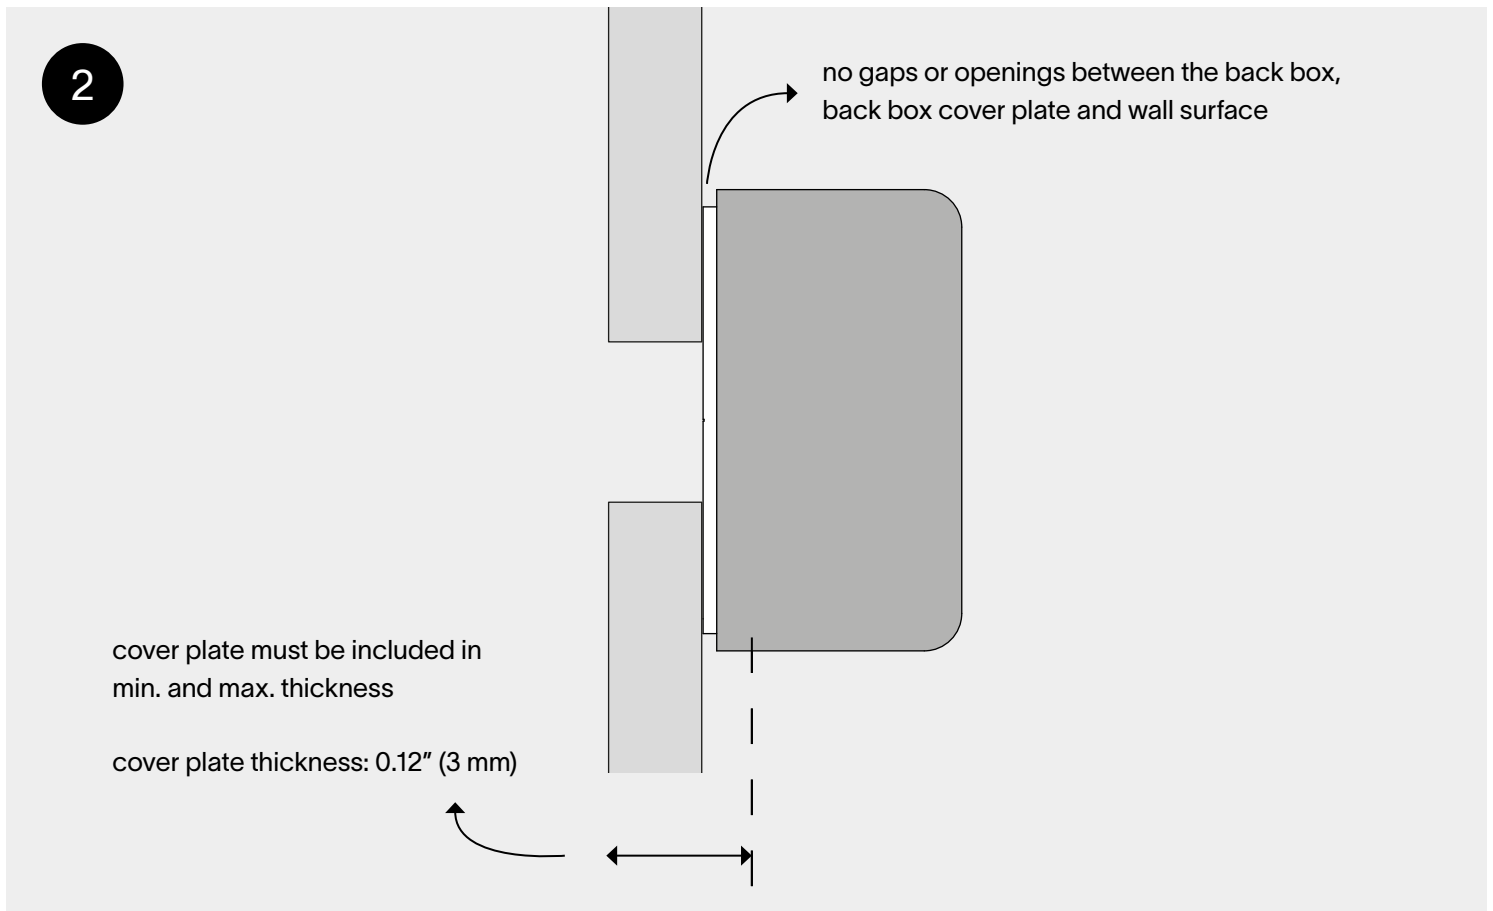

Install the wall surface. Make sure there is **no gapping** between the cover plate and the wall surface. Check the installation manual of the final product for the installation hole and min. and max. wall thickness.

thank you for choosing prado