


back box cover plate


installation instruction

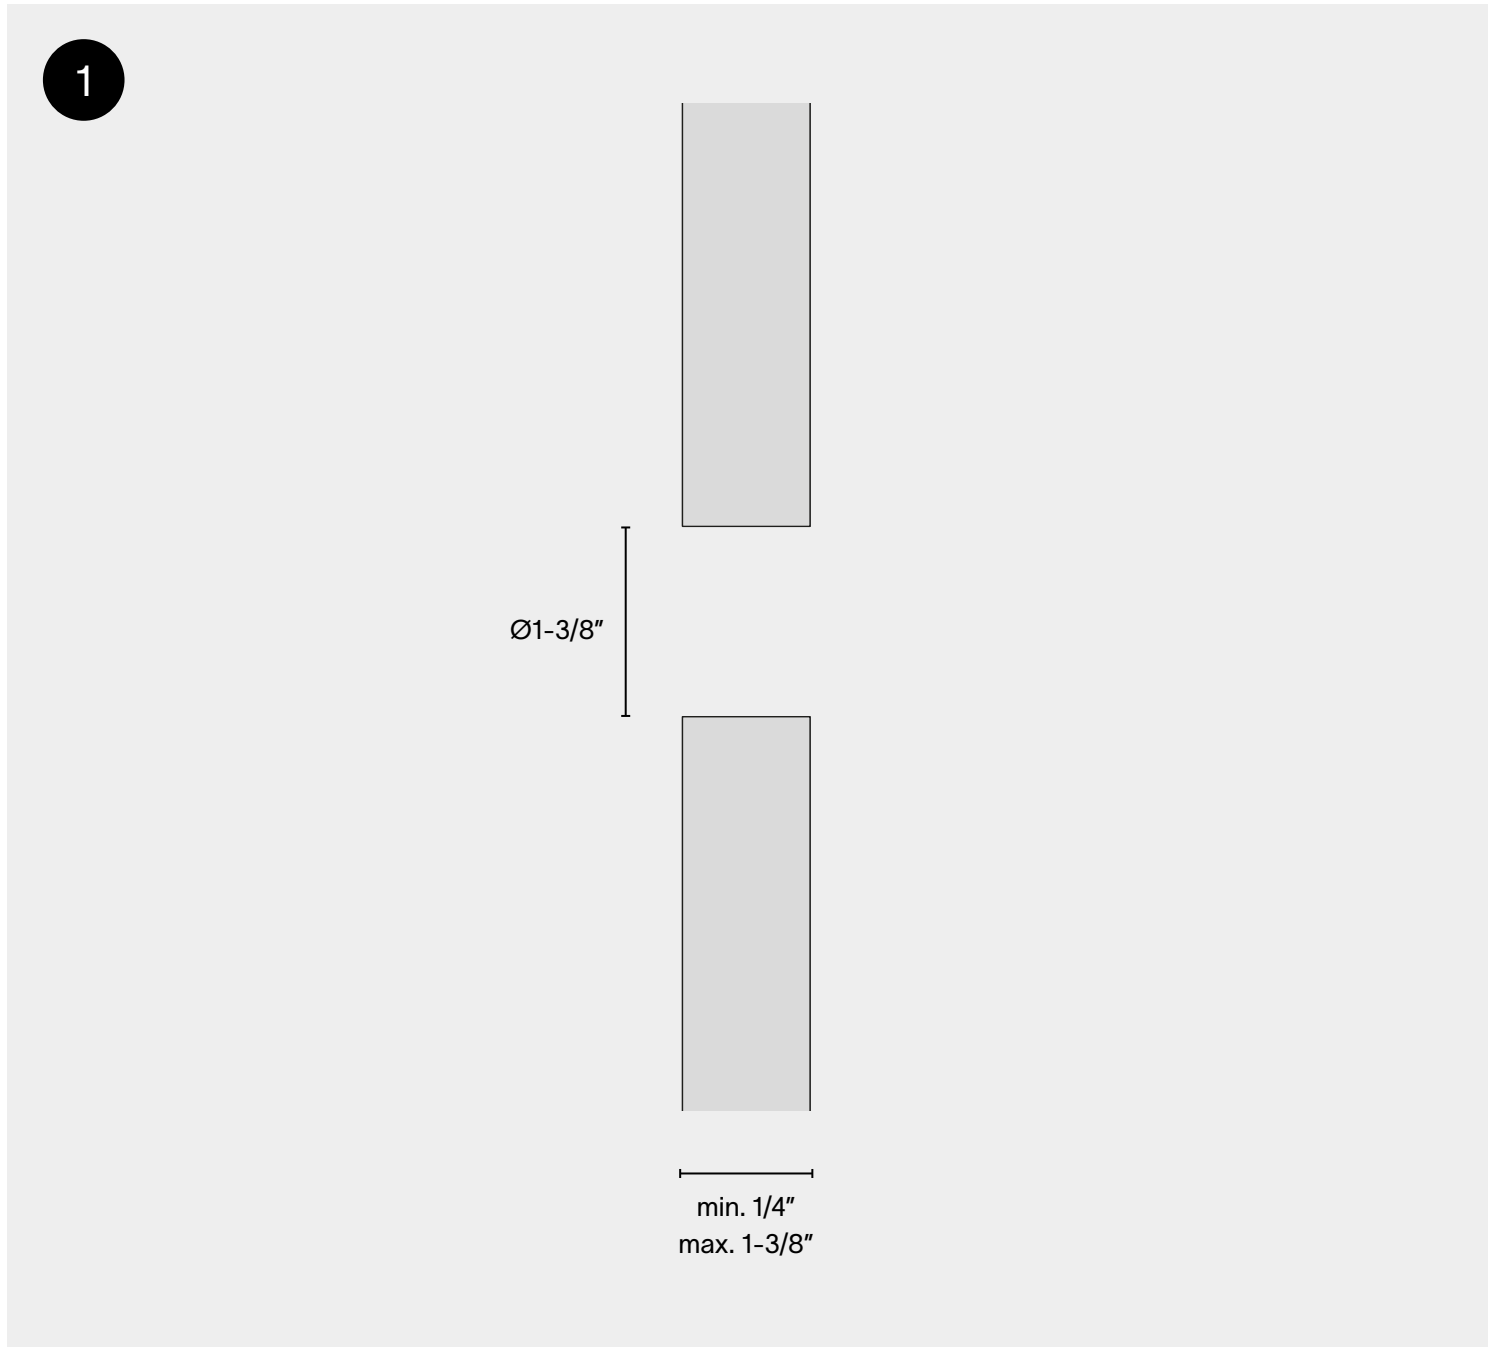

Drill the installation hole and optional countersink.

2


optional flush mount countersink

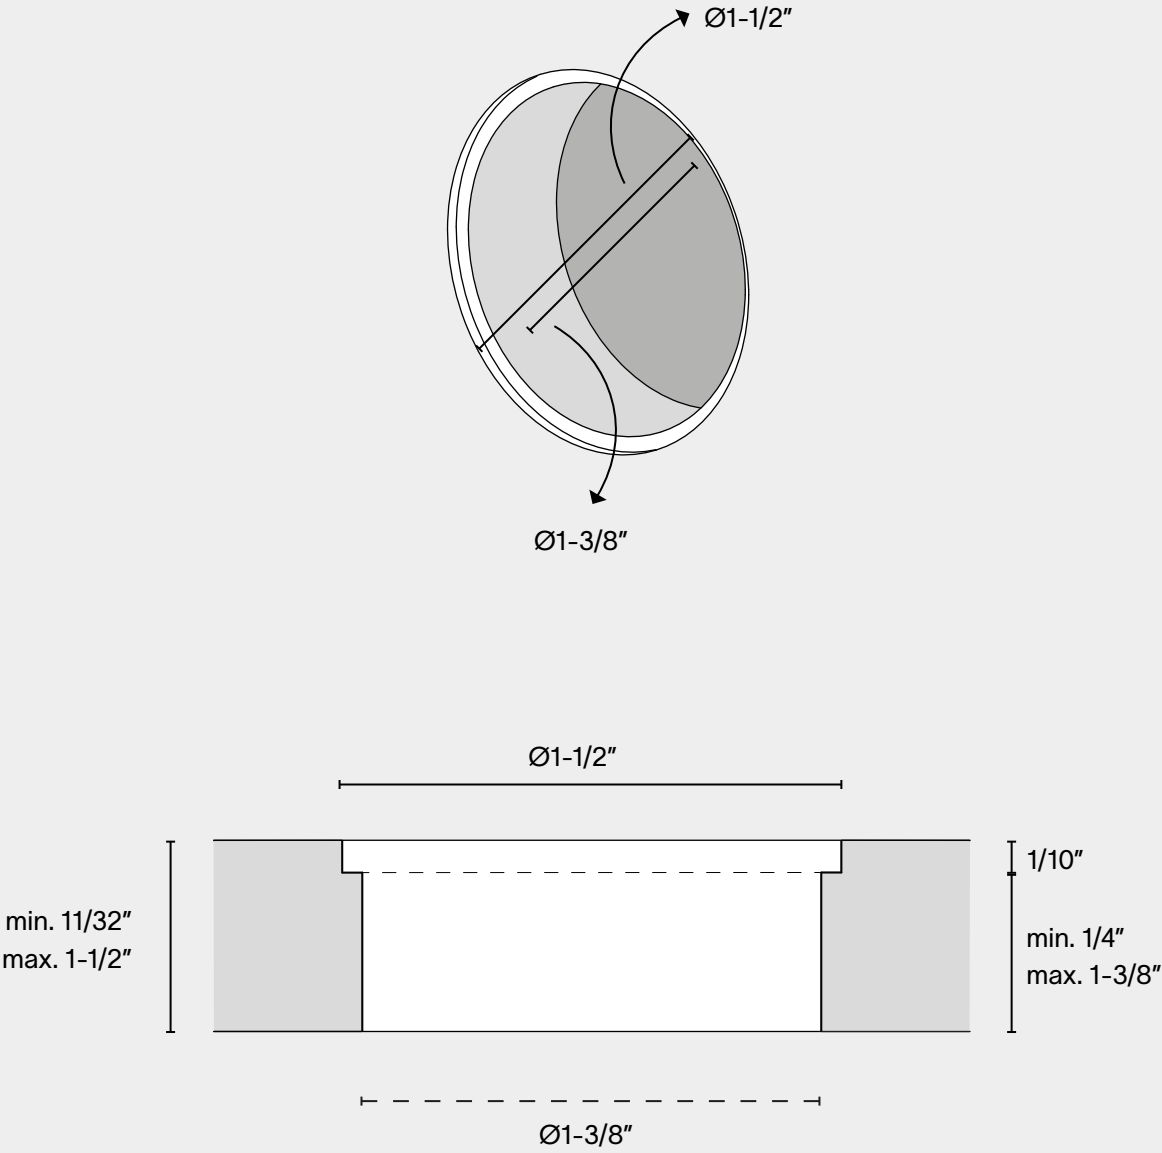


Flush mount countersink.

flush mount countersink guideline


3

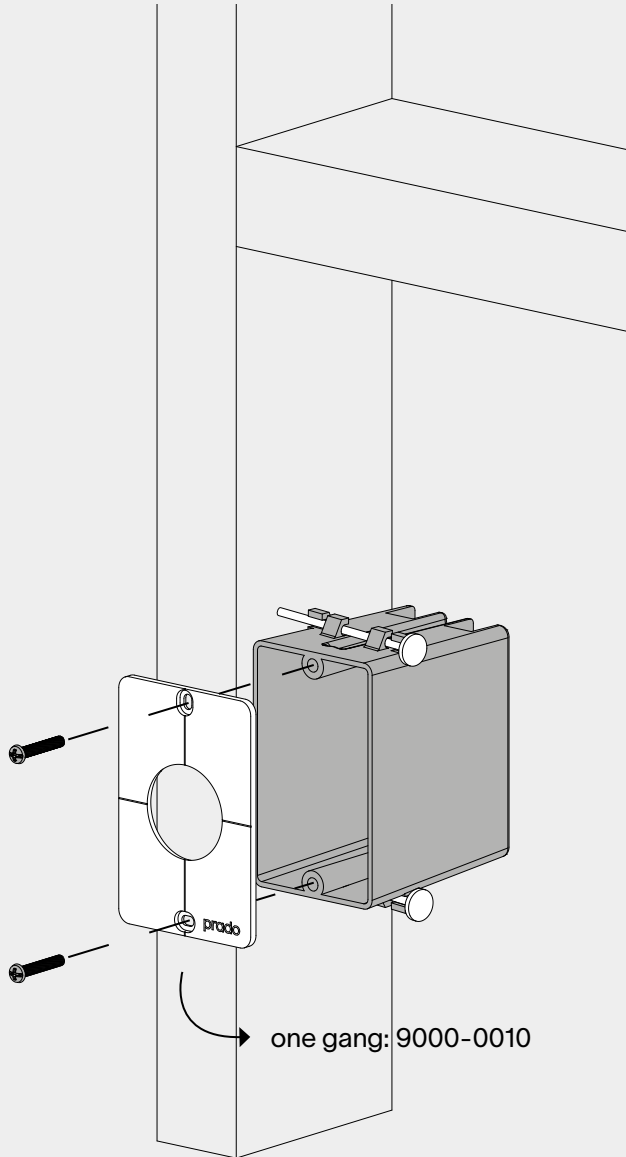

OR

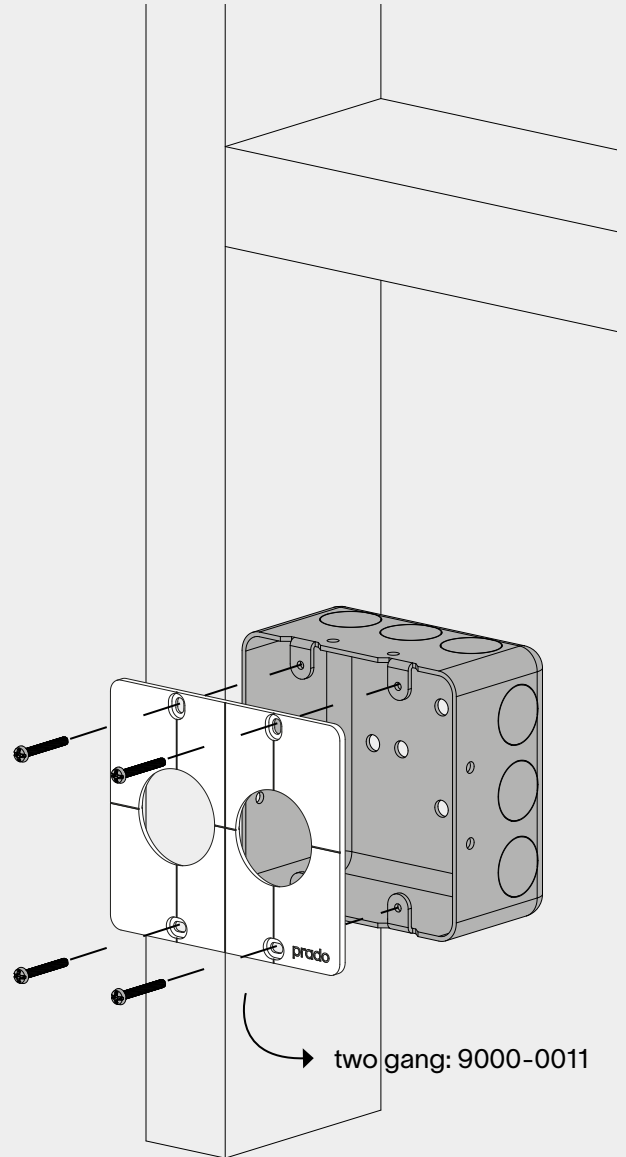

Install the cover plate onto the back box. The back box cover plate must fully enclose the opening of the back box, with no gaps or exposed openings.

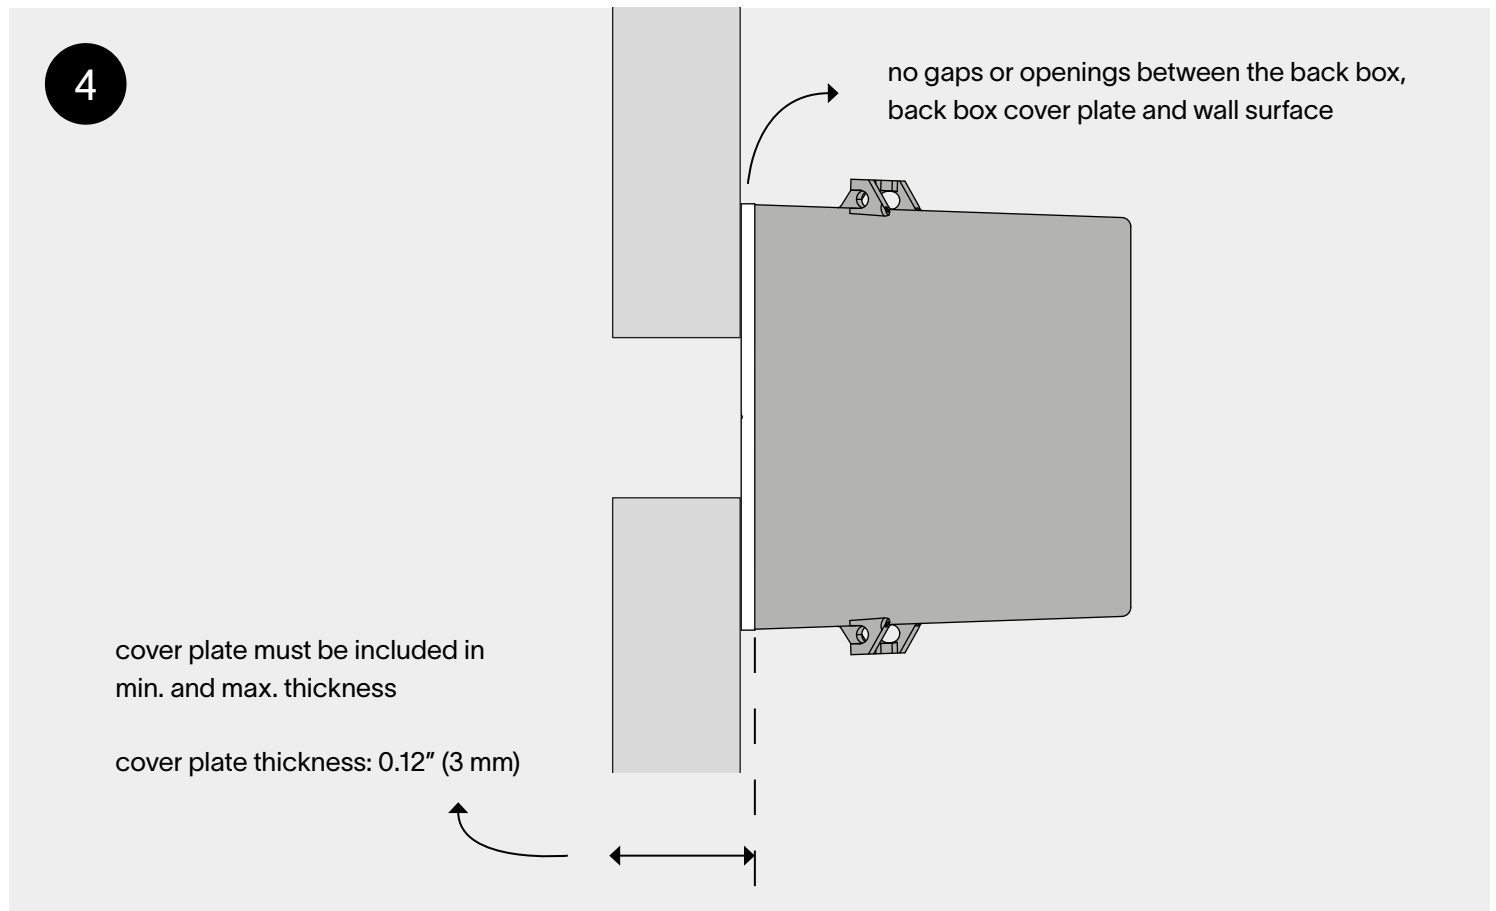

Install the wall surface. Make sure there is **no gapping** between the cover plate and the wall surface. Check the installation manual of the final product for the installation hole and min. and max. wall thickness.

thank you for choosing prado