

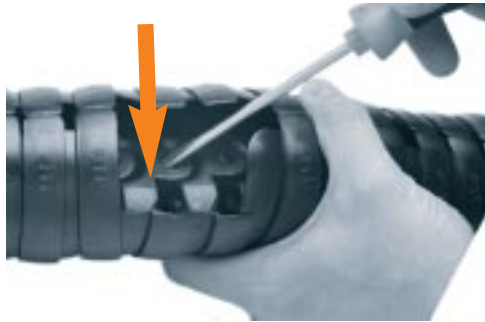


Assembling - TRE-30, TRE-40, TRE-60, TRE-70, TRE-85, TRE-100

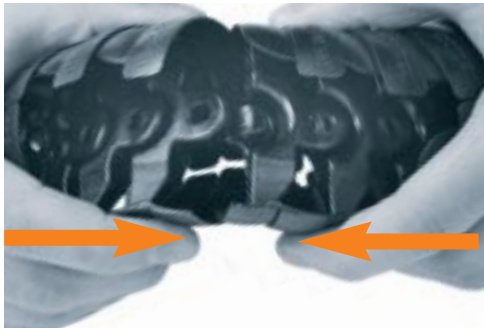

Hold two pieces together at the inner radius and move the socket up against the ball's wedged end. Push until a clicking sound indicates a secure fit of the socket onto the ball.

Separating - TRE-60, TRE-70, TRE-85, TRE-100

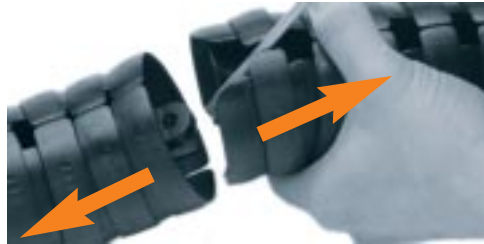

Insert a screwdriver into the opening of the socket from the top. Then twist apart, counter-clockwise.

Separating - TRE-30, TRE-40



Bend the cable carrier into it's radius and twist apart, counterclockwise.