

# Installation Instruction

FF109-300




# TENMAT

## Step 1

Ensure the cover will fit your chosen recessed light fixture.


*Maximum Fixture Dimensions:*

- IC rated fixtures only
- Diameter 6-7/8"
- Height 7-1/2"
- Weight 3.8LB
- Base: 7-7/8" by 10-3/4" Max.

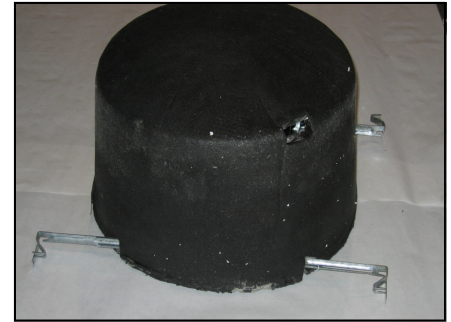

## Step 2


Hanger bars of the light fixture shall be screwed to the joists in addition to the tabs being hammered into the joists, following the light manufacturer's installation instruction.

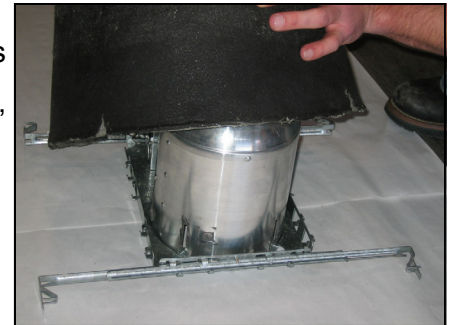

## Step 3

Place Tenmat FF109 cover over the fixture.  
Slit the cover to fit over the hanger bars of the fixture.  
Cut four slits with a size up to 1" max.

**Slits exceeding 1" are NOT permitted !!!**

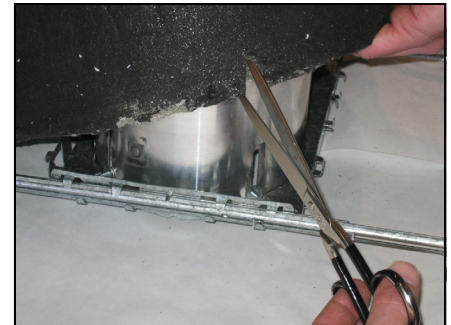

## Step 4

The wire can be fed through one of the cover vent holes located at the top. Follow the light manufacturer instructions to make proper connections.



## Step 5

Put the cover on top of the fixture. Check for secure fit, and make sure the cover overhangs the hanger bars. The FF 109 Light Cover must fit flush with the back surface of the drywall board.

